

UCD Residences Laundry Guide

Step 1.



- Load an empty washing or drying machine
- Close the drum door, select cycle & identify the colour code (Yellow, Blue, Purple, Red, Orange).

Step 2.



- Select your device at the payment terminal.
- Press the left blue button until the selected device number appears on the top display.



Step 3.



- Tap your debit or credit card at the card reader.

Step 4.



- The selected price will appear (€)
- The right green button lights up.

Step 5.



- To confirm, press the green button.
- The charge will be debited from your credit or debit card.

Step 6.



- Please wait! The payment is in process! Once confirmed please ensure your selected machine has started.

Please contact residences@ucd.ie if you have any queries or issues regarding the laundry systems.